






Connect cable or use optional cap to keep water out of motor

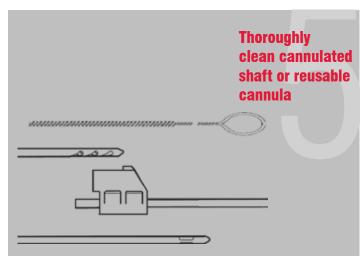



















PAL System Cleaning Chart

PAL-100 / PAL-200 / PAL-600 / PAL-650

